

Programming Steps:

Language Selection: To access the language choices press **MODE**, then press the **UP** or **DOWN** buttons to scroll through the language choices. Press **MODE** when desired language choice appears.

Currency Symbol: To access the currency symbol choices press **MODE** two times and then use the **UP** or **DOWN** buttons to scroll through the currency symbol choices.

Price Change: To access press **MODE** three times, scrolling display prompts you to **PUSH** a selection button – the current price setting will display for that specific column - change price by using the **UP** or **DOWN** buttons.

Display Brightness: To access the display brightness setting press **MODE** four times, then press the **UP** or **DOWN** buttons to toggle between the high and low settings.

Vend Counter: To access the vend counter press **MODE** five times, scrolling display prompts you to **PUSH** any selection button to display total sales for that individual column. Repeat for any or all columns.

Choose Payment Type: To select the payment options of; **COIN** or **CARD** or **BOTH**
COIN: coin acceptance only
CARD: credit card acceptance only
BOTH: coin or credit card acceptance