
 







| | |
|---------------------------------|---|
| 24V AC – RED |  |
| OV – WHITE |  |
| Standard Vac input – Purple |  |
| Turbo Vac input – Grey |  |
| Standard Vac output – Black |  |
| Turbo Vac output – Blue |  |
| Coin Pulse input – Orange/Black |  |

Standard settings



\$1 buys

1.5min for Turbo

3min for Standard

Welcome message:

“TURBO Vac Extra Suction”

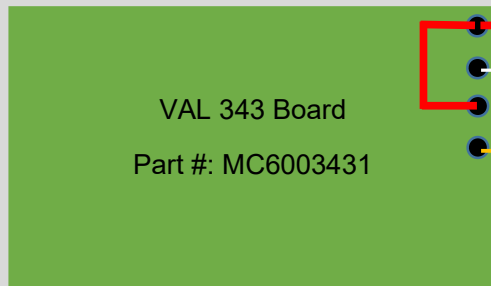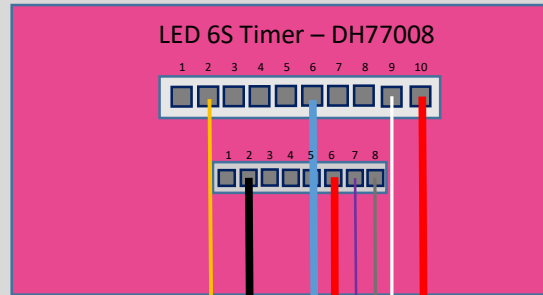


If you would like to swap the function your iVac Turbo will automatically start on.

STEP 1

Swap the **LED+** wires and **NO** wire from button to button.

*You can also swap the decal to prevent confusion for future technicians.

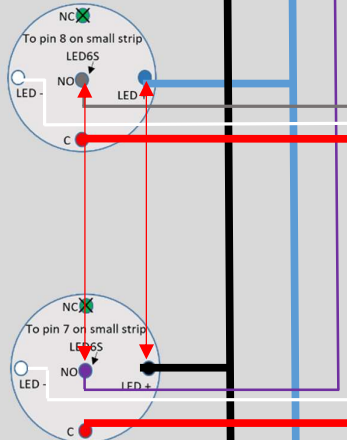

STEP 2

Swap the Standard and Turbo wire at the green plug.

STEP 3 – Program change Swap –

Standard time – (CC:XX) value
Turbo time – (c:XX) with each other.

NOW:

Turbo time – (CC:XX) value
Standard Time –(c:XX)

Snip from manual:

Standard LED6s Settings iVac TURBO –

| | | |
|-------------|---|------|
| CC:XX [-15] | Time per coin pulse for Standard Vac. Adjustable from 0:01 to 9:59 | 3:00 |
| S:XX [4] | Number of coins to start for Standard Vac. Adjustable from 1 to 200 | 1 |
| c:XX [-30] | Time per coin pulse for Turbo vacuum. Adjustable from 0:01 to 9:59 | 1:30 |

Please scan this QR Code to be directed to all Vac manuals on our website



1. 24V HOT
2. 24V COMMON
3. Standard Vac
4. Turbo Vac
- 5.
- 6.