




PRO WASH

QUEST

iWash

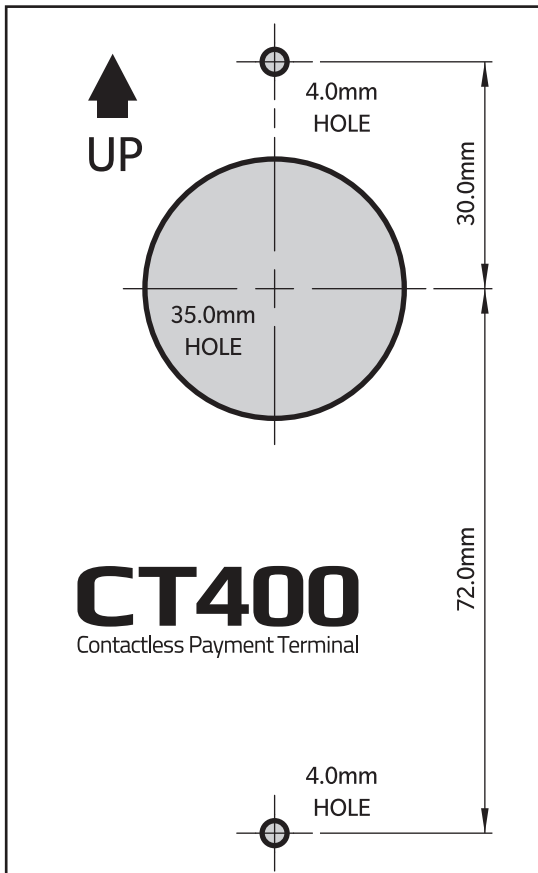

## CT400 installation template guide Prowash iWash Non-Hinged Coin Door

### Instructions

1. Place template on front of coin door, ensuring the bottom left hand corner is aligned.
2. Adhere, or hold steady with your hand
3. Mark all drill hole mid points (x3) on coin door, using template as a guide (may need to punch hole prior to making markings)
4. Remove template, drill holes
5. Follow further instructions in CT400 install manual

**ALIGN WITH BOTTOM  
LEFT HAND CORNER**

